



**169 00 060**  
31cmスクエアプレート  
D-31.2 H-4 **¥6,900**

**169 00 061**  
26.5cmスクエアプレート  
D-26.5 H-3.2 **¥4,100**

**169 00 063**  
23cmスクエアプレート  
D-23.1 H-2.8 **¥3,300**

**169 00 064**  
20cmスクエアプレート  
D-20.1 H-2.4 **¥2,600**

**169 00 065**  
18cmスクエアプレート  
D-18.3 H-2.2 **¥2,200**


**169 00 066**  
16cmスクエアプレート  
D-16.1 H-2.2 **¥1,800**



**169 00 045**  
33cm角プラター  
L-33 S-22.1 H-3.2 **¥5,300**



**169 00 046**  
30.5cm角プラター  
L-30.4 S-20.2 H-2.8 **¥4,200**

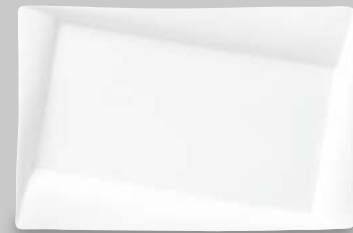

**169 00 047**  
28cm角プラター  
L-28 S-18.7 H-2.7 **¥3,500**



**169 00 094**  
33cm細長角プラター  
L-33.2 S-12.4 H-2.7 **¥3,500**



**169 00 095**  
30.5cm細長角プラター  
L-30.2 S-11.4 H-2.3 **¥2,600**



**169 00 011**  
23cmスクエア深皿  
D-23.2 H-4.7 **¥3,800**



**169 00 012**  
21cmスクエア深皿  
D-21 H-4.3 **¥2,900**



**169 00 023**  
18cmボウル  
D-18 H-5.6 **¥2,500**



**169 00 024**  
16cmボウル  
D-16.2 H-4.9 **¥2,100**



**169 00 025**  
14cmボウル  
D-14.1 H-4.4 **¥1,800**



**169 00 026**  
12cmボウル  
D-12.3 H-3.7 **¥1,400**



**169 00 027**  
10cmボウル  
D-10 H-3.2 **¥1,100**



**169 00 028**  
8cmボウル  
D-8.3 H-2.8 **¥950**



**169 00 037**  
10.5cm深ボウル  
D-10.7 H-5.8 **¥1,400**



**169 00 038**  
9cm深ボウル  
D-9.1 H-5.1 **¥1,200**



**169 00 039**  
7.5cm深ボウル  
D-7.6 H-4.5 **¥1,000**



**169 00 018**  
9cmスクエア深皿  
D-9 H-2 **¥1,000**



**169 00 097**  
3連菜  
L-25 S-8.3 H-2.8 **¥2,400**



**169 00 098**  
2連菜  
L-16.8 S-8.3 H-2.8 **¥1,500**



**169 00 092**  
4菜皿  
D-27.3 H-1.5 **¥4,400**



**169 00 091**  
3菜皿  
L-32 S-12 H-1.5 **¥3,600**



**169 00 052**  
コーヒーカップ  
L-12 S-9.5 H-7.4 C-176cc **¥1,000**

**169 00 055**  
コーヒーソーサー  
D-12.8 H-1.6 **¥950**