



**187 00 061**  
26.5cmプレート  
D-26.7 H-3.1 **¥4,200**



**187 00 062**  
24cmプレート  
D-24 H-2.8 **¥3,500**



**187 00 064**  
21cmプレート  
D-21 H-2.6 **¥2,900**



**187 00 065**  
18cmプレート  
D-18.2 H-2.5 **¥2,200**



**187 00 066**  
15cmプレート  
D-15.2 H-2.2 **¥1,800**



**187 00 011**  
27cmスパゲティボウル  
D-27.3 H-4.8 **¥4,400**



**187 00 013**  
19.5cmスープボウル  
D-19.7 H-4.7 **¥2,900**



**187 00 014**  
17cmフルーツボウル  
D-17.2 H-4.6 **¥2,500**



**187 00 040**  
15cmトルボウル  
D-15.2 H-6.9 **¥2,300**



**187 00 042**  
13cmトルボウル  
D-13.1 H-6.1 **¥1,900**



**187 00 044**  
11cmトルボウル  
D-11.1 H-5.1 **¥1,500**



**187 00 086**  
多用カップ  
D-9.6 H-6.5 C-185cc **¥950**



**187 00 052**  
コーヒーカップ  
L-11.3 S-9.5 H-6.4 C-185cc **¥1,100**  
**187 00 055**  
コーヒーソーサー  
D-14.7 H-1.9 **¥1,000**