

COUNTRY SIDE
STORM GRAY | ストーム グレー



111 73 002
26cmディナー皿
D-26 H-3.2
¥2,300

111 73 004
23cmミート皿
D-23.2 H-3
¥1,600

111 73 006
19.5cmケーキ皿
D-19.8 H-2.9
¥1,200

111 73 008
15cmパン皿
D-15 H-2.5
¥950



111 73 097
19cmラザニア
L-19.7 S-12.2 H-3.5 ¥1,800



111 73 072
グラタン
L-16 S-14.4 H-5.1 ¥2,200



161 73 012
22cmバスタボウル
D-22.4 H-3.7 ¥1,600



COUNTRY SIDE



113 73 046
28.5cmオーバルプラター
L-29.1 S-22.5 H-4 ¥3,500



113 73 071
27cmオーバルペーカ
L-27 S-17.2 H-5.5 ¥3,500



111 73 046
31.5cmプラター
L-31.8 S-22 H-3.7 ¥4,800



111 73 047
26cmプラター
L-26.2 S-18.2 H-2.7 ¥3,200



111 73 048
24cmプラター
L-24 S-17 H-2.7 ¥2,300



111 73 021
23cmボウル
D-23.2 H-8.3 ¥2,900



111 73 023
20cmボウル
D-20 H-7 ¥2,600



111 73 024
17cmボウル
D-17 H-6.3 ¥1,500



111 73 025
13.5cmボウル
D-13.7 H-5.5 ¥1,000



111 73 027
10cmボウル
D-10.2 H-4.1 ¥800



113 73 051
ダイナーマグカップ
L-12.2 S-8.8 H-9.3
C-345cc ¥1,400



113 73 052
ダイナーカップ
L-11.4 S-8 H-8.6
C-240cc ¥1,300



113 73 050
高台削りマグカップ
L-12.2 S-8.8 H-10.4
C-330cc ¥1,400



111 73 052
コーヒーカップ
L-10.5 S-7.8 H-7.3
C-180cc ¥900



111 73 053
ティーカップ
L-12.5 S-9.9 H-5.8
C-270cc ¥950



113 73 056
ダイナースープカップ
L-13.2 S-10.5 H-6.3
C-340cc ¥1,600



111 73 058
片手スープカップ
L-15 S-12.1 H-6.4
C-340cc ¥1,400

161 73 055
モア兼用ソーサー
D-15.3 H-2 ¥700

161 73 055
モア兼用ソーサー
D-15.3 H-2 ¥700

111 73 056
コーヒーソーサー
D-14.3 H-2.5 ¥700

111 73 055
兼用ソーサー
D-15.3 H-2.5 ¥750

111 73 055
兼用ソーサー
D-15.3 H-2.5 ¥750

111 73 055
兼用ソーサー
D-15.3 H-2.5 ¥750