



COUNTRY SIDE
RASCAL TIMBER | ラスティックティンバー



134 06 002
27cmディナー皿
D-27.2 H-2.7 ¥2,500



134 06 004
23cmミート皿
D-23.4 H-2.2 ¥1,500



134 06 006
20cmケーキ皿
D-21.3 H-2.2 ¥1,200



134 06 007
17.5cmケーキ皿
D-17.7 H-1.8 ¥950



107 06 012
22.5cmパスタボウル
D-22.5 H-4.6 ¥1,800



134 06 022
22cmスープパスタ
D-22.3 H-5.2 ¥1,800



134 06 023
19cmスープボウル
D-19.2 H-4.4 ¥1,500



134 06 024
15.5cmフルーツボウル
D-15.5 H-5.1 ¥1,200



134 06 042
32.5cmプラター
L-32.6 S-22.8 H-3.9 ¥4,800



134 06 044
29cmプラター
L-29 S-20.1 H-3.6 ¥3,700



134 06 045
26.5cmプラター
L-26.5 S-18.2 H-3.4 ¥3,400



134 06 052
コーヒーカップ
L-10.7 S-8.4 H-6.7
C-170cc ¥1,000

134 06 055
兼用ソーサー
D-15.2 H-1.9 ¥750



134 06 053
ティーカップ
L-11.8 S-9.5 H-6.1
C-225cc ¥1,000

134 06 055
兼用ソーサー
D-15.2 H-1.9 ¥750