

COUNTRY SIDE
DESSERT BEIGE | デザートベージュ

COUNTRY SIDE



134 66 002
27cmディナー皿
D-27.2 H-2.7 **¥2,400**



134 66 004
23cmミート皿
D-23.4 H-2.2 **¥1,400**



134 66 006
20cmケーキ皿
D-19.8 H-2 **¥1,100**



134 66 007
17.5cmケーキ皿
D-17.7 H-1.8 **¥950**



134 66 042
32.5cmプラター
L-32.6 S-22.8 H-3.9 **¥4,700**



107 66 012
22.5cmパスタボウル
D-22.5 H-4.6
¥1,700



134 66 023
19cmスープボウル
D-19.2 H-4.4
¥1,400



134 66 024
15.5cmフルーツボウル
D-15.5 H-5.1
¥1,100



134 66 052
コーヒーカップ
L-10.7 S-8.4 H-6.7
C-170cc **¥950**



134 66 053
ティーカップ
L-11.8 S-9.5 H-6.1
C-225cc **¥950**



134 66 050
マグカップ
L-11.3 S-8.8 H-9.2
C-315cc **¥1,100**

134 66 055
兼用ソーサー
D-15.2 H-1.9 **¥700**

134 66 055
兼用ソーサー
D-15.2 H-1.9 **¥700**

COUNTRY SIDE
FOREST GREEN | フォレストグリーン



134 78 002
27cmディナー皿
D-27.2 H-2.7 **¥2,400**



134 78 004
23cmミート皿
D-23.4 H-2.2 **¥1,400**



134 78 006
20cmケーキ皿
D-19.8 H-2 **¥1,100**



134 78 007
17.5cmケーキ皿
D-17.7 H-1.8 **¥950**



134 78 042
32.5cmプラター
L-32.6 S-22.8 H-3.9 **¥4,700**



107 78 012
22.5cmパスタボウル
D-22.5 H-4.6
¥1,700



134 78 023
19cmスープボウル
D-19.2 H-4.4
¥1,400



134 78 024
15.5cmフルーツボウル
D-15.5 H-5.1
¥1,100



134 78 052
コーヒーカップ
L-10.7 S-8.4 H-6.7
C-170cc **¥950**



134 78 053
ティーカップ
L-11.8 S-9.5 H-6.1
C-225cc **¥950**



134 78 050
マグカップ
L-11.3 S-8.8 H-9.2
C-315cc **¥1,100**

134 78 055
兼用ソーサー
D-15.2 H-1.9 **¥700**

134 78 055
兼用ソーサー
D-15.2 H-1.9 **¥700**