



**118 00 002**  
28cmプレート  
D-28.1 H-2.8 ¥2,500



**118 00 004**  
23cmプレート  
D-23.5 H-2.5 ¥1,400



**118 00 006**  
19cmプレート  
D-19.5 H-2.5 ¥1,100



**118 00 007**  
18cmプレート  
D-18.1 H-2 ¥850



**178 00 062**  
25cmスクエアプレート  
D-25 H-3 ¥4,100



**178 00 063**  
23cmスクエアプレート  
D-23.3 H-2.8 ¥3,500



**178 00 064**  
20cmスクエアプレート  
D-20 H-2.4 ¥2,600



**178 00 043**  
31.5cmプラター  
L-31.5 S-22.8 H-4 ¥4,100



**178 00 044**  
29cmプラター  
L-29 S-21.2 H-3.7 ¥3,500



**178 00 045**  
26cmプラター  
L-26.1 S-19 H-3.5 ¥2,900



**178 00 047**  
23cmプラター  
L-23 S-16.7 H-3.1 ¥2,000



**178 00 023**  
25.5cmディープスープボウル  
D-25 H-5.4 ¥2,500



**178 00 024**  
23.5cmディープスープボウル  
D-23.8 H-5.2 ¥1,800



**178 00 010**  
27cmリムスープボウル  
D-27 H-4.6 ¥2,500



**178 00 011**  
24cmリムスープボウル  
D-24.3 H-4.4 ¥2,100



**178 00 140**  
16.5cmトロンバートルボウル  
D-16.9 H-10.4 ¥2,500



**178 00 142**  
14.5cmトロンバートルボウル  
D-14.7 H-8.9 ¥2,000



**178 00 143**  
12.5cmトロンバートルボウル  
D-12.5 H-8 ¥1,600



**178 00 051**  
カプチーノカップ  
L-12.5 S-10.4 H-7.7 C-230cc  
¥1,100

**178 00 055**  
兼用ソーサー  
D-15.1 H-2 ¥750



**178 00 052**  
コーヒーカップ  
L-11.7 S-9.4 H-7.1 C-200cc  
¥1,000

**178 00 055**  
兼用ソーサー  
D-15.1 H-2 ¥750